

Manual Firmware Update Instructions

For YI Home Camera ver. A

Purpose

Normally YI Home camera update the firmware online via Xiaoyi App, no manually work needed.

If the Wi-Fi is working fine, but you are experiencing any kind of problems as below: no voice prompts since power on, App can't pair the camera, App connection always fails, the status LED is always yellow or flashing, etc. It's recommended to try to manually update the latest firmware to fix it.

Suitable Model


YHS-113

Preparations


- PC with Internet Access
- TF Card (microSD Card)
- TF card reader

Updating Instructions


1. Formatting the TF card to FAT32 (file system) via card reader. (Default parameter in Windows® format tool)

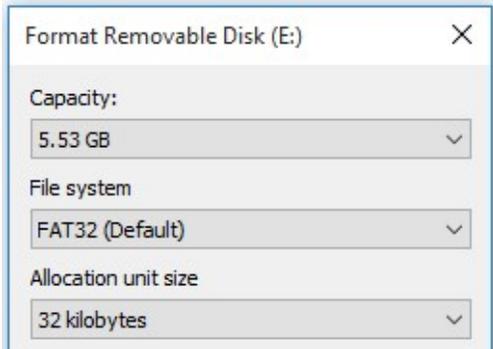


2. Downloading the latest Firmware file from Xiaoyi Support Website.

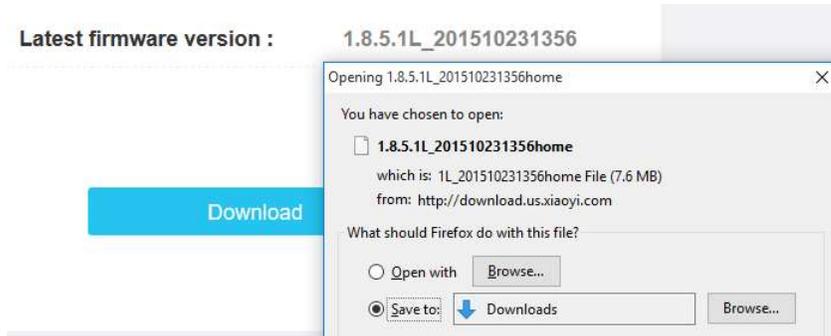

3. Copying this file to the root of the TF card and rename it to "home". (Case sensitive and no file name extension)

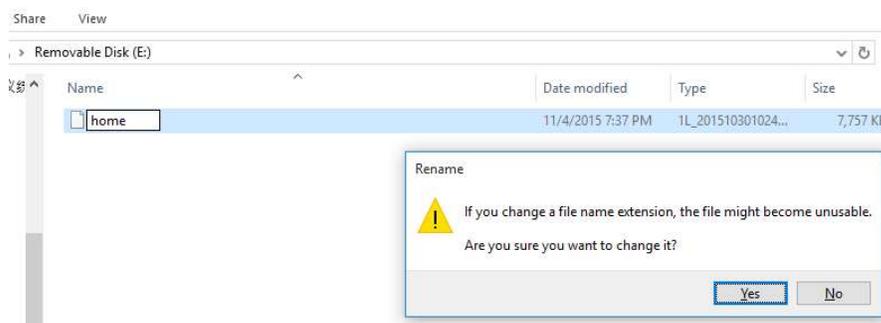

4. Safely removing the card reader from PC, inserting the TF card into camera, then power it on.

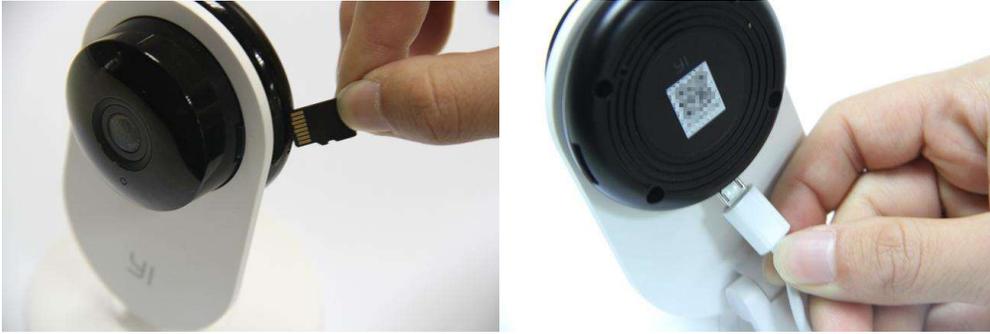

5. The camera will start updating automatically, the whole process may take 2-3minutes.
 Updating Start: yellow LED on (power on) → yellow LED flashing (process ongoing)
 Updating End: after auto rebooting, voice prompts is launched. (Successful)

Note:

1. Re-pairing the camera may be needed in some case, just following the voice prompts.
2. We strongly recommend to reset the camera after updating finished and repair the App.
3. If you fail in updating process or still have problem.

VERSION	UPDATES	DATE
A	The first revision	2015-11-04